Canon

# *Service Bulletin*

COPIER

Issued by Canon Europa N.V.

---

**Model :** **GP160F**

**No.:** GP160-004
(FF-T01-E40-000037-01)

**DATE:** 10.08.99

---

**Destination :**

| | | |
|---|---|---|
| F13-6771-001 GP160F FRN | F13-6771 GP160F FRN | F13-6781-001 GP160F GER |
| F13-6781 GP160F GER | F13-6791 GP160F HOL | F13-6721 GP160F ITA |
| F13-6751-001 GP160F UK | F13-6751 GP160F UK | F13-6752 GP160F UK |

**Location :** **G3/G4 Kit**

**Subject :** **Parts addition**


**Reason :**

If the centre of the DIMM is pressed when the DIMM is inserted, some of the IC chip pins may not go in fully.

**Outline :**

Seals warning the user to press down on both ends, and not in the middle,will be stuck on at the two locations described below:

1. On the accessory DIMM package.
2. On the service parts FLASH ROM PCB ASSEMBLY package.

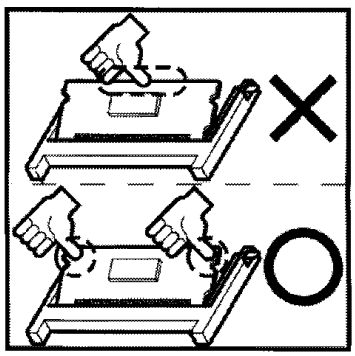

## Parts

| Part Name | | Part No. | Qty | IC |
|---|---|---|---|---|
| Old | FLASH ROM PCB ASSEMBLY | FG2-9736-000 | 1 | NY |
| New | FLASH ROM PCB ASSEMBLY | FG2-9736-000 | 1 | |