
Additional Information for SETUP INSTRUCTIONS

追加情報

Before mounting the printer controller, perform the following procedure to check the ROM version using the Service mode.

[Checking the ROM Version]
1. Call the Service mode to the screen. (For the procedure to access Service Mode, see the Service Manual.)
2. Type “6” from the 10-Key Pad and press the Start key.
3. Press the > key six times to check the ROM version.

[Display]

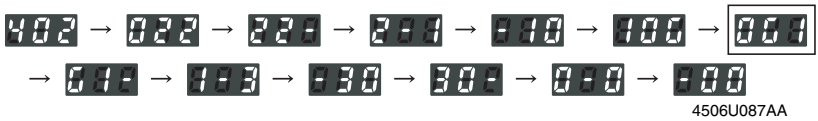

4506U087AA


ROM Version: 4021/4022-10G1-30-00

* If the ROM version displayed is the one cited above or earlier than that, upgrade the ROM version.

プリンタコントローラを取り付ける前に、サービスモードで以下の確認を行ってください。

【ROM バージョンの確認】
1. サービスモードを表示させます。（表示方法はサービスマニュアルを参照してください。）
2.10 キーにて “ 6 ” を入力し、スタートキーを押します。
3. ＞キーを 6 回押し、表示された ROM バージョンを確認します。

[表示]

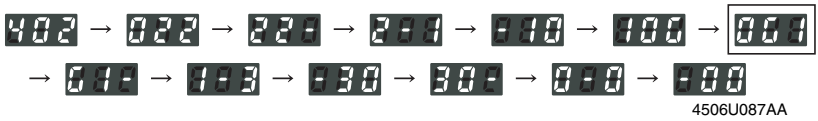

4506U087AA

ROM バージョン：4022-10G1-30-00

※ ROM バージョンが上記以前（上記の ROM バージョンを含む）の場合は、ROM のバージョンアップを行ってください。