(1) ATDC Sensor Automatic Adjustment

The reference value for the ATDC Sensor is automatically adjusted as detailed below using the ATDC Sensor Automatic Adjustment mode.

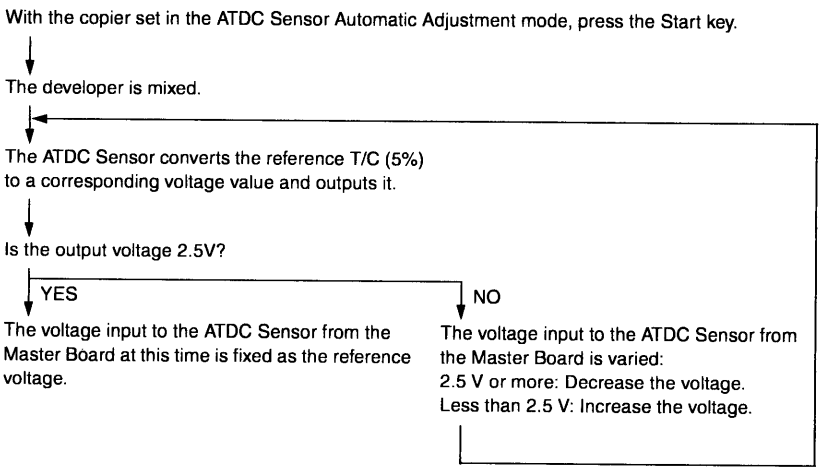

NOTE

If the automatic adjustment mode is run at a time when the starter has not been changed, it can result in a wrong T/C reference value being set by the copier. Avoid casual use of this mode.

If the setting value has been cleared because of the RAM board being replaced, return the value set in the Tech. Rep. mode to the original one before the board was replaced.