11-2. Paper Empty Detection Mechanism

The Paper Empty Sensor detects a paper-empty condition in the drawer.

Paper Present

PC101,102: Blocked

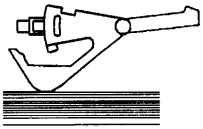

Paper not Present

PC101,102: Unblocked

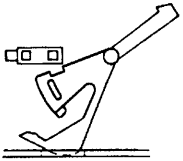

1154M036AA

PC101: 1st Drawer Paper Empty Sensor
PC102: 2nd Drawer Paper Empty Sensor

	CONTROL SIGNAL	Blocked	Unblocked	WIRING DIAGRAM
PC101	PWB-A PJ4A-6	L	H	11-E
PC102	PWB-A PJ3A-4	L	H	11-F