
Fig. 3 Removal of the Connector

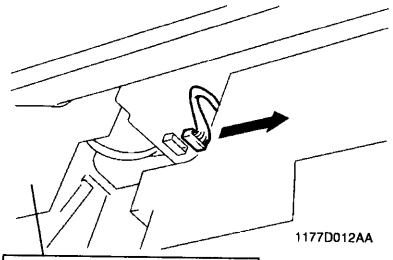

Connector position:
Under the duct for the Ventilation Fan Motor.

NOTE

NEVER touch the terminal of the flat cable.

(5) Removal of the Transport Unit

After the Fusing Unit has been removed, remove the Transport Unit.


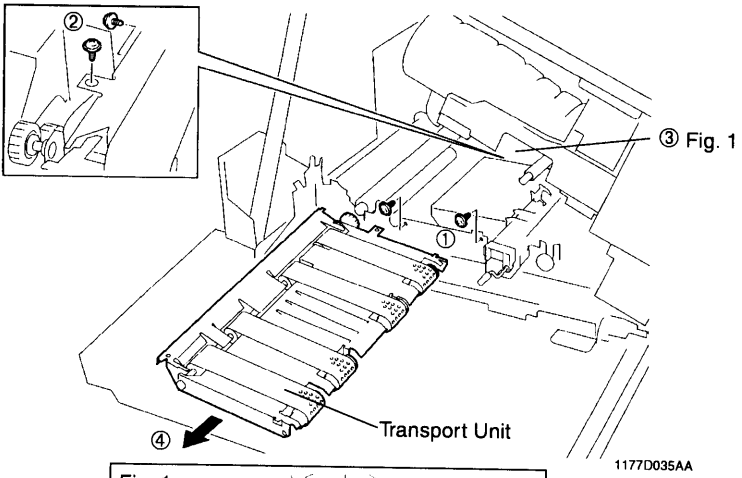


Fig. 1
Parts to be Taken Apart in the Rear

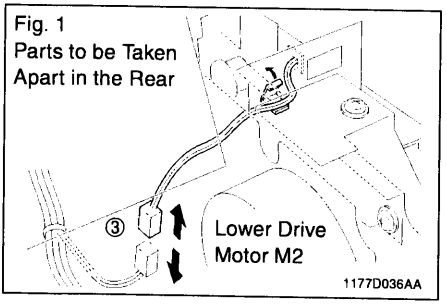

NOTE

Use care not to lose the springs (front and rear) installed under the guide plate.