
2-7. IR SECTION

NOTE

To remove the Original Glass, first remove the Original Scales and then slide the glass to the scale side and remove it. (Do not remove the Original Glass positioning bracket.)

(1) Cleaning of the 1st to 3rd Mirrors, Slide Rails, Lens and Cooling Fan Filter

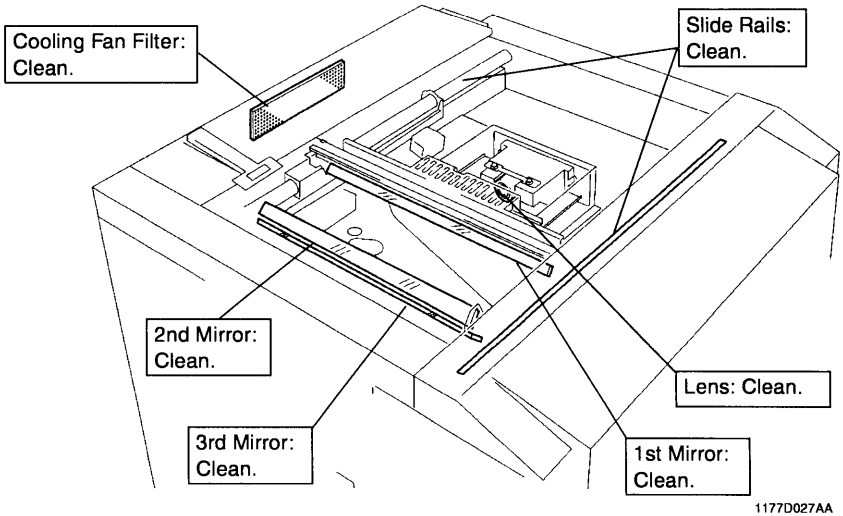

(2) Disassembly of the IR Section

