

(3) Removal of the Exposure Lamp and Inverter

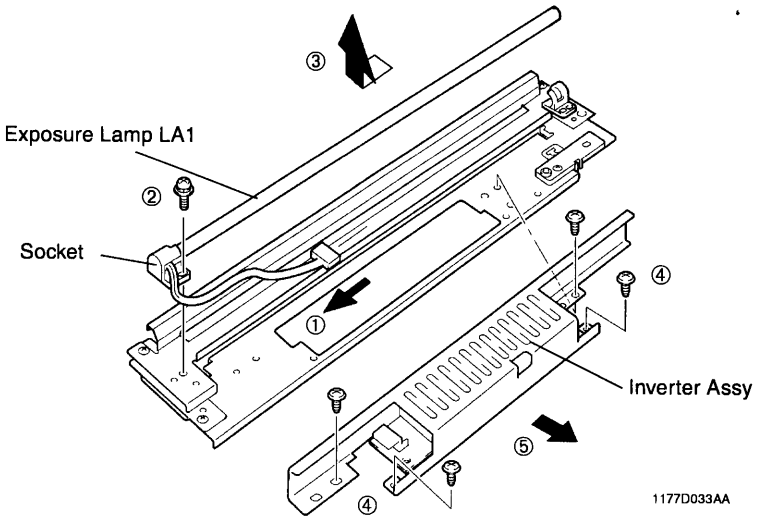

Disassembly of the Inverter Assy

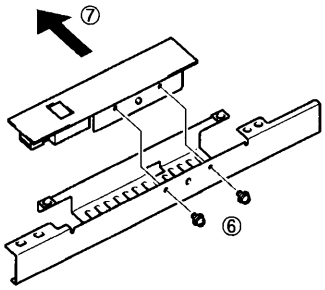

NOTE

When removing the Exposure Lamp, be sure to hold onto its socket.
When removing the PWB from the Inverter Assy, use care not to touch its pattern surface.