Winding the Cable Around the Pulley and Adjusting Tension in the Timing Belt

Fig. 1


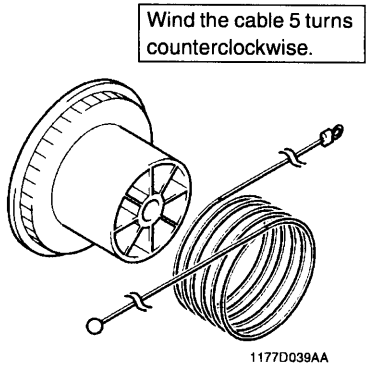


Fig. 2

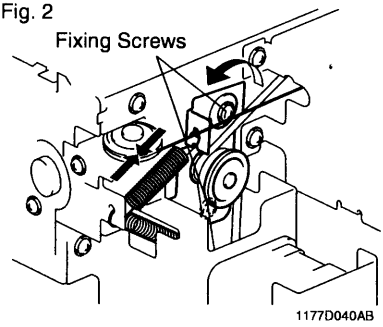

NOTE

Temporarily loosen the fixing screw and find a position at which the Tension Adjusting Metal Bracket is stopped by the tension of the spring. Then, holding the Tension Adjusting Metal Bracket in that position, tighten the fixing screw again.

2-8. IMAGING UNIT SECTION

(1) Cleaning of the PC Drum Paper Separator Fingers and Ds Positioning Collars Replacement of the PC Drum and Toner Scattering Prevention Plate

