
2-10. FUSING SECTION

(1) Cleaning and Replacement of the Thermistor
Cleaning of the Fusing Thermoswitch

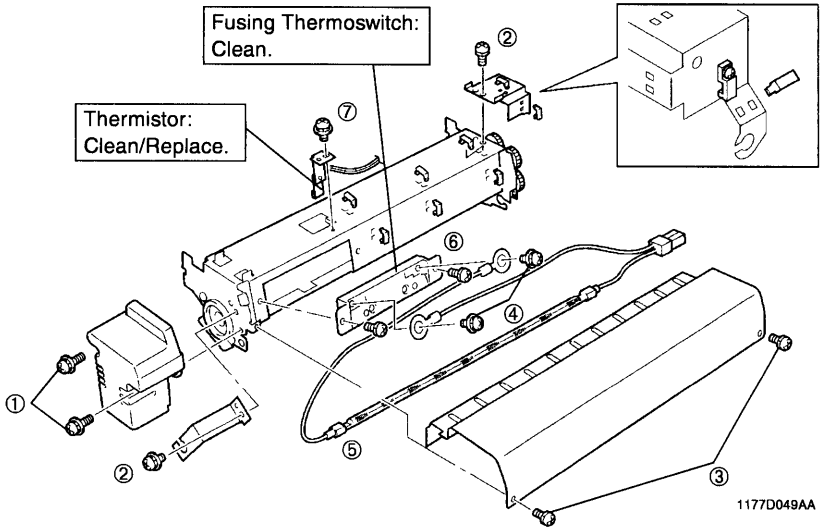

(2) Cleaning and Replacement of the Upper Fusing Roller
Cleaning and Replacement of the Upper Separator Fingers

