

(8) IR / Zoom FD

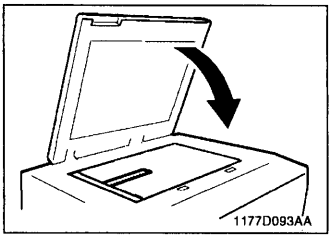

- Setting value range: 90 to 110
- Movement equivalent to 1 step of setting value: ×0.001mm

Adjustment Procedure

1. Place a scale on the Original Glass and make a copy each at each of the following zoom ratios X2.00, X1.00, and X0.50.
2. Check that the copy meets the specifications.

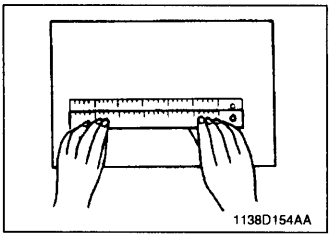

3. If it does not, use Adjust Mode A6 [IR/Zoom (FD) Copy] and change the adjustment value so that the copy meets the specifications.

IR/ZOOM (FD)<COPY> 10 KEY INPUT :

Enter the adjustment value from the Key-pad and press the Start key to validate the value entered. (If a wrong value is entered, press the Clear key to clear it.)

If the image on the copy is longer than the specifications, decrease the adjustment value.

If the image on the copy is shorter than the specifications, increase the adjust-ment value.

NOTE

If the adjustment value is changed in "IR/Zoom (FD) Copy," be sure to perform "IR/Shading Position."
