

2 FUNCTIONS OF SWITCHES AND OTHER PARTS ON PWBs

2-1. PWB Location

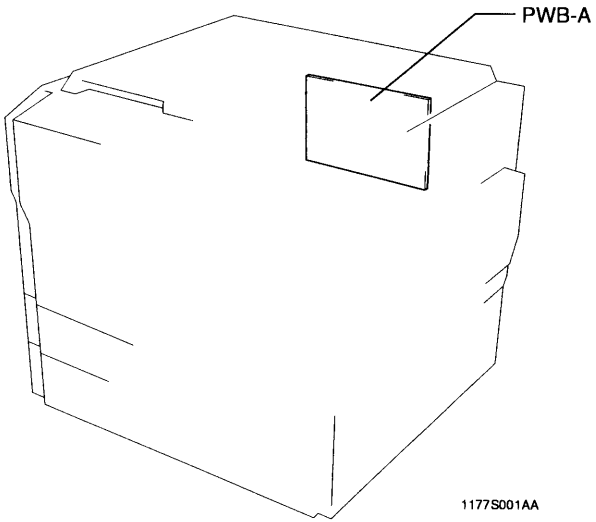

2-2. Master Board PWB-A

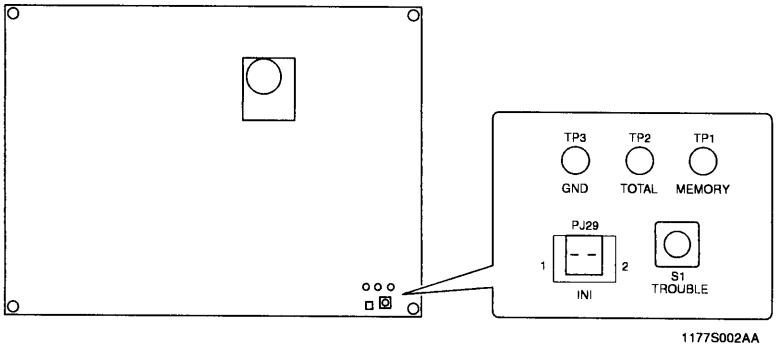

Symbol	Name	Description
S1	Trouble Reset Switch	Resets a malfunction.
PJ29	Initialize Points	Reset a misfeed, malfunction, or erratic display.
TP1	Memory Clear Test Point	Initializes all data except those counted by the electronic counters.
TP3	GND Test Point	Ground terminal used for memory clear.