



Using a brush, wisk dust off the Paper Dust Remover.

(7) Removal of the Suction Unit


1. Referring to p. D-82, remove the 1st and 2nd Drawers.
2. Referring to p. D-26, remove the PC Unit.
3. Referring to p. D-12, remove the Paper Dust Remover.
4. Referring to p. D-40, remove the Fusing Unit.

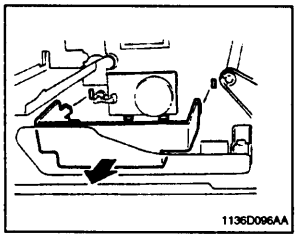

5. Remove the Main Motor cover.

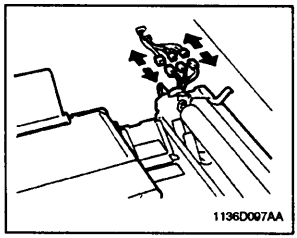

6. Remove three connectors (2P, 2P and 3P) from the Suction Unit.

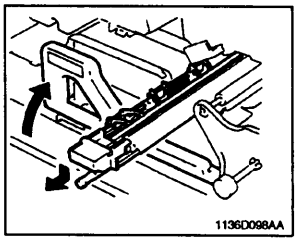

7. Return the Transport Section Release Lever to its original position.
8. Remove the Transfer/Separator Corona by first pressing it down and then pulling it out.