


(4) Removal of the Scanner

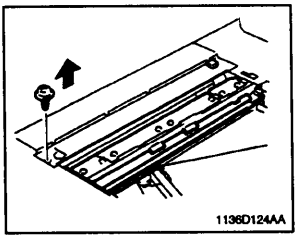


1. Remove one scanner mounting screw.

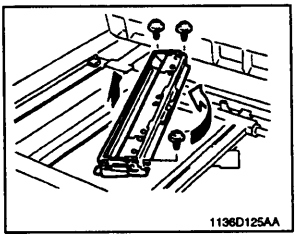

2. Remove three screws from the Scanner. Holding the scanner at a point close to the Scanner Shaft, turn the Scanner counterclockwise to remove it.

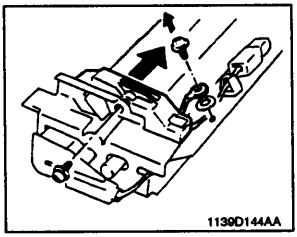


3. Remove one screw and the Wire Guide.
4. Remove one screw and the Grounding Wire.

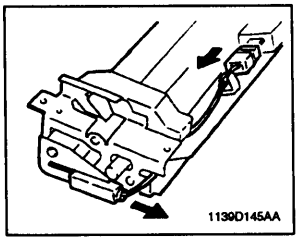

5. Unplug the Exposure Lamp connector CN.
6. Unplug the Thermal Fuse connector CN.
7. Remove the Scanner.

(5) Cleaning of the Exposure Lamp

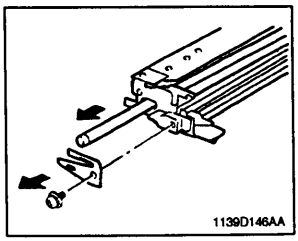

1. Remove one screw to remove the Exposure Lamp Terminal.
2. Slide out the Exposure Lamp.