


(9) Winding of the Lens Drive Cable

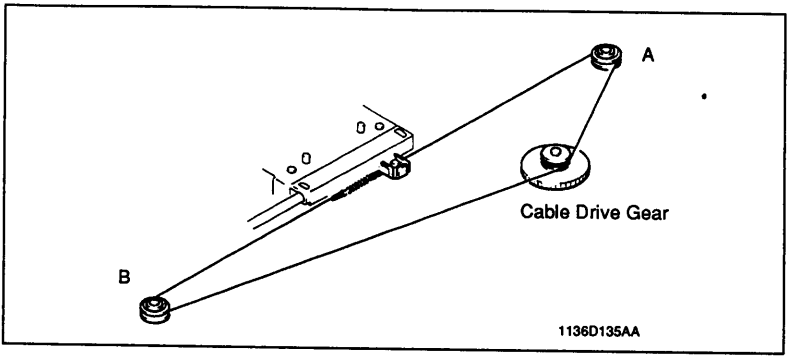


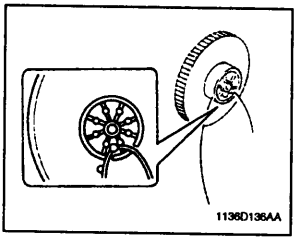


1. Hold the Cable Drive Gear in position with its Bead at the bottom.

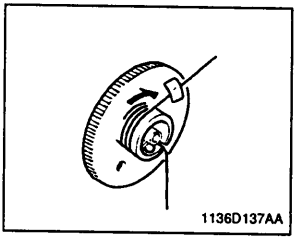

2. Wind the longer length of Cable three and 1/4 turns clockwise around the Cable Drive Gear, working from the back to the front side. Then tape it.

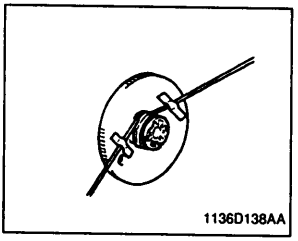

3. Wind the shorter length of Cable three and 1/2 turns counterclockwise around the Cable Drive Gear, working from the front to back side. Then tape it.

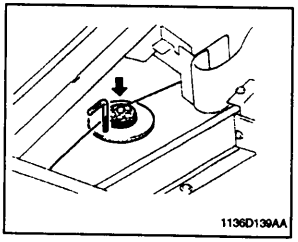

4. Pass the longer length of Cable through the hole in the Light Blocking Plate.
5. Slide the Cable Drive Gear onto its shaft and insert a wrench into the hole (4 mm dia.) to position the Cable Drive Gear.