

2-5. PC Unit

(1) Removal of the PC Unit

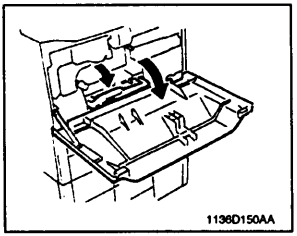


1. Open the Front Door.
2. Swing the Transport Section Release Lever down.

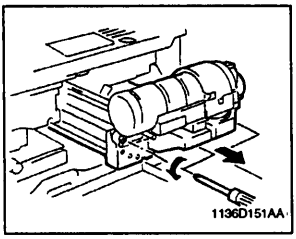


3. Loosen two PC Unit mounting screws.
4. Remove the PC Unit.


(2) Disassembly of the PC Unit

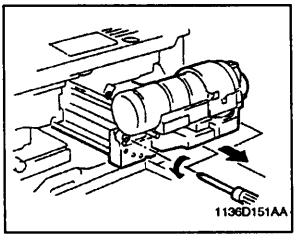

1. Remove the PC Drum Charge Corona Unit.

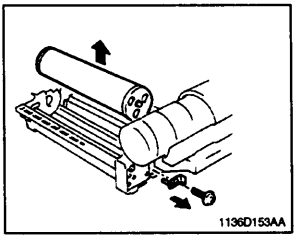

2. Remove one screw and the PC Drum.

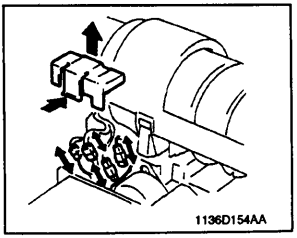

3. Remove the Sub Hopper Toner Replenishing Cover.
4. Unplug four connectors CNs (2P, 2P, 2P, 3P).