

24. Remove one screw and the Bias Terminal.
25. Remove one screw and the Pressure Coil Spring Retaining washer.
26. Remove one C-clip and the Bucket Bushing.

NOTE

When reinstalling the Washer, make sure that the back side of the washer faces the screw head.

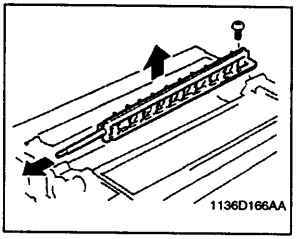

27. Remove the Bucket Roller.

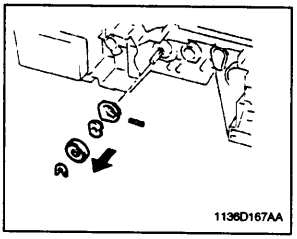

28. Snap off the C-clip from the front Ds Roll and then remove the Roll.

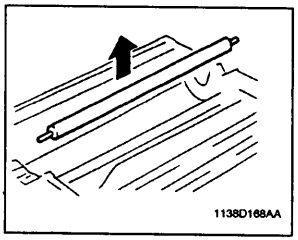

29. Remove the Sleeve Roller.

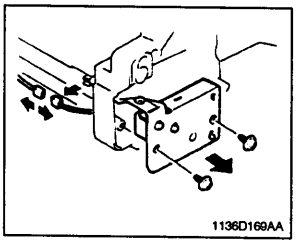

30. Remove the connector CN (2P) from the Paper Separator Finger Drive Assy.
31. Remove the harness of the Paper Separator Finger Drive Assy from the clamp.
32. Remove the harness of the Paper Separator Finger Drive Assy.