(7) Replacement of the Cleaning Blade

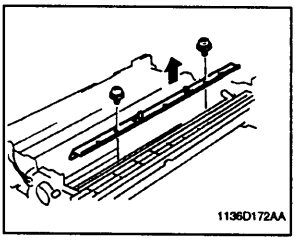

1. Remove two screws and the Cleaning Blade.
2. Replace the Blade with a new one and secure it with the screws.

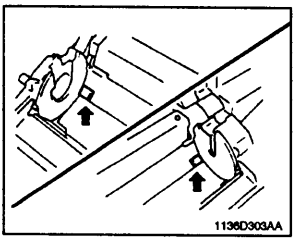

NOTE

When reinstalling the Cleaning Blade, be sure it is in contact with the bracket. See p. D-30.
After replacing the Cleaning Blade, apply toner over the surface of the Cleaning Blade.
Also apply the lubricant supplied with the Blade to two seals at the points shown (use a brush).

(8) Replacement of the Starter

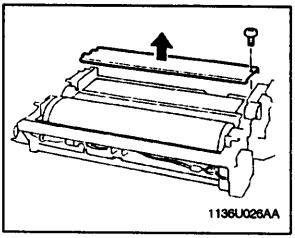

1. Remove the Hopper Unit. See Step 5 on p. D-27.
2. Remove one screw and the Starter Chamber Lid.

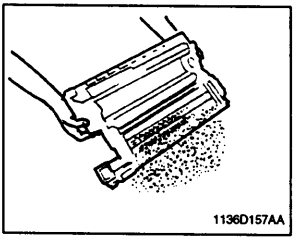

3. Dump the Starter out of the Developing Unit.

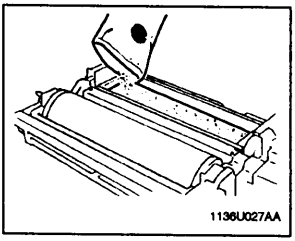

4. Fill the Unit with fresh Starter.

NOTE

After replacement, perform the following steps.
1. Cleaning of the Image Erase Lamp.
2. Reset the counter in the "Starter" display. See the "SERVICE MODE" in the "SWITCHES ON PWBs".
3. ATDC Adjustment, see p. D-56.
4. Exposure Adjustment in the Auto Mode, see p. D-58.