

NOTE

When reinstalling the Toner Antispill Plate and Toner Antispill Seal, press them in the direction of the arrows.

(12) Cleaning of the Toner Antispill Plate

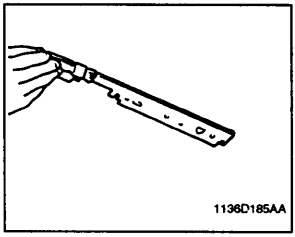

Using a brush, wisk toner and dust off the the Toner Antispill Plate.

(13) Cleaning of the Main Erase Lamp Filter

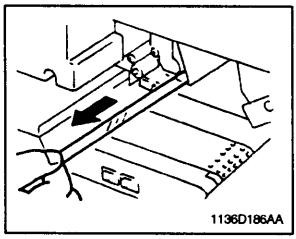

1. Remove the PC Unit by referring to p. D-26.
2. Pull out the Main Erase Lamp Filter in the direction of the arrow.

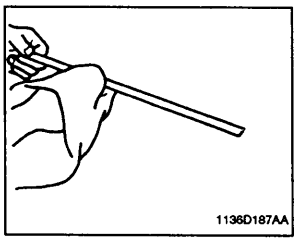

3. Using a soft cloth dampened with alcohol, wipe clean the Filter.

(14) Cleaning of the Image Erase Lamp

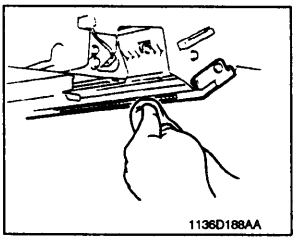

Using a soft cloth dampened with alcohol, clean the Image Erase Lamp.