

(15) Replacement of the Ozone Filter

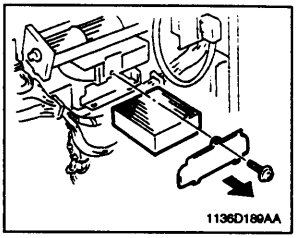

1. Remove six screws and the Rear Cover.
2. Remove one screw and the Ozone Filter Cover.
3. Replace the Ozone Filter with a new one.

(16) Replacement of the Toner Collecting Box

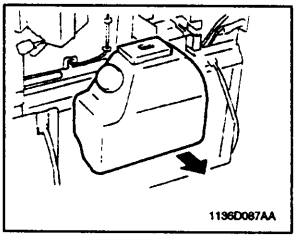

1. Remove six screws and the Rear Cover.
2. Replace the Toner Collecting Box with a new one.