

2-7. Fusing Unit

(1) Removal of the Fusing Unit

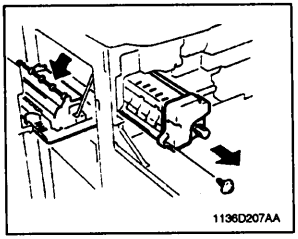


1. Open the Left Door.
2. Remove one screw and the Fusing Unit.


(2) Disassembly of the Fusing Unit

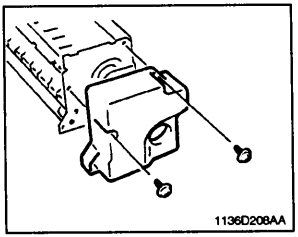


1. Remove two screws and the Front Cover.

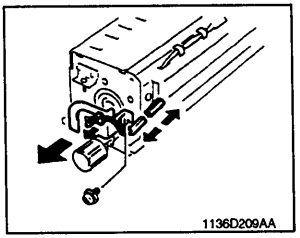

2. Unplug the Heater Lamp Connector CN (1P) at the front of the copier.
3. Unclamp the Heater Lamp Wire.
4. Remove one screw and the Lamp Holder at the front of the copier.

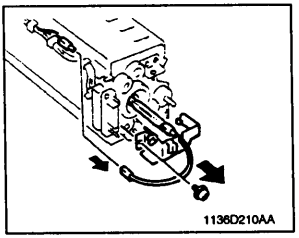

5. Unplug the Heater Lamp Connector CN (1P) at the front of the copier.
6. Remove one screw and the Lamp Holder at the rear of the copier.
7. Unclamp the Heater Lamp Wire.
8. Remove the Heater Lamp.

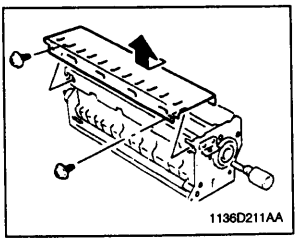

9. Remove two screws and the Upper Cover.