



19. Remove the Lower Fusing Roller.

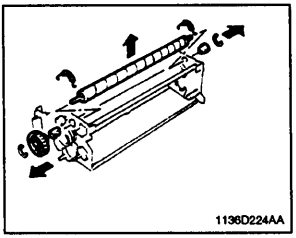


20. Remove the two Springs.
21. Remove the two E- rings from the Cleaning Roller and then the Roller.

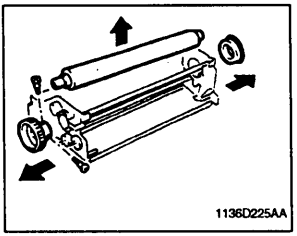

22. Remove two screws and the Upper Fusing Roller.

(3) Replacement/Cleaning of the Upper Paper Separator Fingers

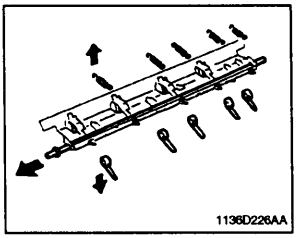

1. Remove five Springs.
2. Slide out the Shaft and then remove the Upper Paper Separator Fingers.
3. Replace the Separator Fingers with new ones.