
(5) Adjustment of Exposure Level in the Manual mode

◆Requirement


- Setting range: 44-56
- No image of step No. 1 of the Kodak Gray Scale should be reproduced on the copy, but a faint image of step No. 2 should be reproduced when the center LED on the Exposure Level Indicator is lit.

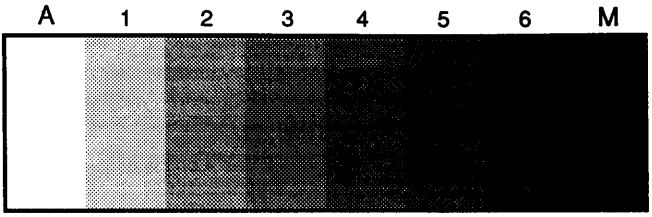

1136D300AA


◆Important

- This adjustment should be follow Checking Auto Exposure Level and Adjustment of the Aperture Blades.

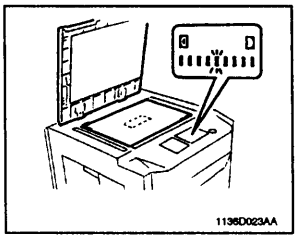


1136D023AA

1. Place the Kodak Gray Scale (KGS) lengthwise, face down and at the center on the Original Glass. Place a sheet of white (no image) A3 or 11" x 17" paper over the KGS and then close the Original Cover.
2. Set the copier into the Manual Exposure mode. Using the Exposure Control keys, set the exposure level so that the center LED on the Exposure Level Indicator lights. Make 15 A3 or 11" x 17" copies and check that the 15th copy meets the exposure requirement given above.
   If the requirement is not met, perform the following adjustment steps.

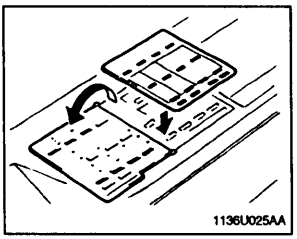

1136U025AA

3. Open the System Panel.
4. Place Service Card 1 on the Supplementary Panel.

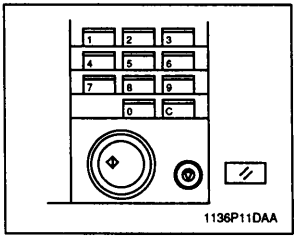

1136P11DAA

5. On the Control Panel, press the Stop Key, Multi-Copy Key 0, Stop Key and Multi-Copy Key 1, in that order. The copier enters the Tech. Rep. Program mode.