



6. Press Multi-Copy key 1 and the Tech. Rep. Choice key (on the card).

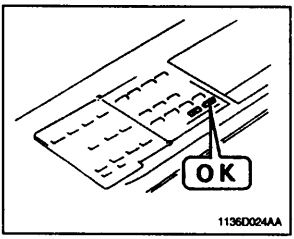

7. Press the OK key (on the card) repeatedly until the Display Panel shows the message "Exp. Lamp Manual Adjust".
8. Note the value shown below the message. Press the Clear key to clear the value.
9. Using the Multi-Copy keys, increase or decrease the value with respect to the noted value for optimum exposure level:

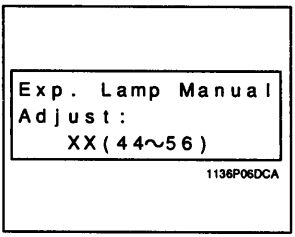

Adjustment procedure

To make the image darker: decrease the value.
To make the image lighter: increase the value.

10. Press the Panel Reset key to return to the initial copy mode.
11. Go to p. D-58, (4) Adjustment of Exposure Level in the Auto Mode followed by (5) Checking Manual Exposure Level and Steps 1 and 2 of this adjustment.