

1136D024AA

6. Press the OK key repeatedly until the Display Panel shows the message "Trailing Edge Erase: (A 13)".
7. Note the value shown below the message and then press the Clear key to clear the current setting.
8. Using the Multi-Copy keys, increase or decrease setting with respect to the noted value for the correct erase width in dimension A on the copy:

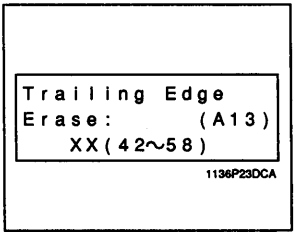

1136P23DCA

Adjustment procedure

When the copy of dimension A is 0.5 mm or less: increase the setting.
When the copy of dimension A is 5.5 mm or more: decrease the setting.

9. Press the Panel Reset key to return to the initial copy mode.