) Adjustment of the Paper Lifting Plate Springs (1st and 2nd Drawers)

nportant


Vhen the size of the paper loaded in the 1st or 2nd Drawer has been changed, be sure to change ıe Springs. When changing the Springs, also change the position of the Springs and Paper ake-Up Roll of the Drawer.

ach drawer uses two Springs and has two spare Springs stored in the underside of the drawer. or disassembly of the Paper Take-Up Roll Unit, refer to p. D-12.

Determine the correct Springs, spring position and Paper Take- Up Roll Unit position by referring o the table below.

ample Paper size: A4 lengthwise or 8-1/2" x 11"

1) Place one SP Silver spring in the drawer at ALL SP1. 1-9, SP2. 10-14.
2) Place the other SP Silver spring at SP1. 6-9, SP2. 10-14.
3) Place the Paper Take-Up Roll Unit at position No. 3.

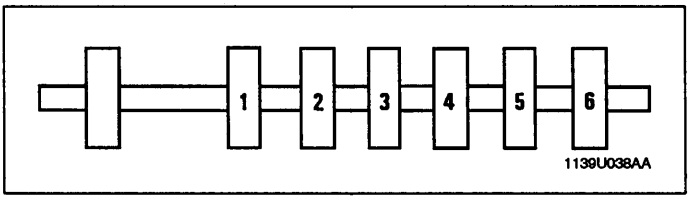

		Position of 1st (2nd) Drawer Spring					1st (2nd) Drawer Paper Take-Up Roll Position
No.	1st (2nd) Drawer Paper Size Indication	ALL SP1. 1~9 SP2. 10~14	SP2. 12~14	SP1. 6~9 SP2. 10~11	SP1. 2~5	SP1. 1	
1	A3/A4	SP Silver				SP Silver	6
2	11"x17"·LTR.				SP Silver		5
3	G. LTR						5
4	B4/B5						4
5	254						4
6				SP Silver			3
7	FLS.						3
8	LTR.						3
9	A4						3
10	FLS.	SP Gold		SP Gold			2
11	B5						2
12			SP Gold				1
13	A5						1
14	INV.						1

Edge Guide