

Replacement of Springs


This procedure is for the 1st Drawer. The steps also apply to the 2nd drawer.

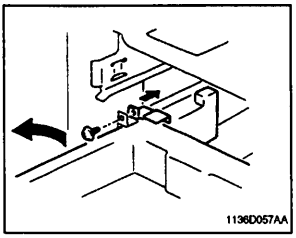


1. Pull out the 1st Drawer and remove the stopper screw and then the stopper.
2. Remove the Drawer.

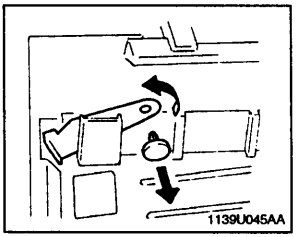

3. Remove the Hinge Shaft from the front Paper Separator Finger and then the Finger.

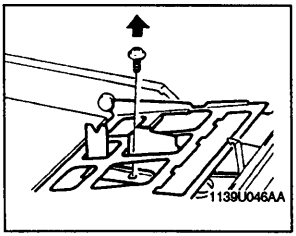

4. Remove the screw from Side Guide Plate I.

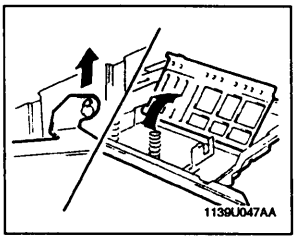

5. Lift the hinged portion and then swing the Paper Lifting Plate in the direction of the arrow. Change the springs. Close the Plate.