
8-3. Supplementary Panel

Flipping the System Panel to the left reveals the Supplementary Panel controls.

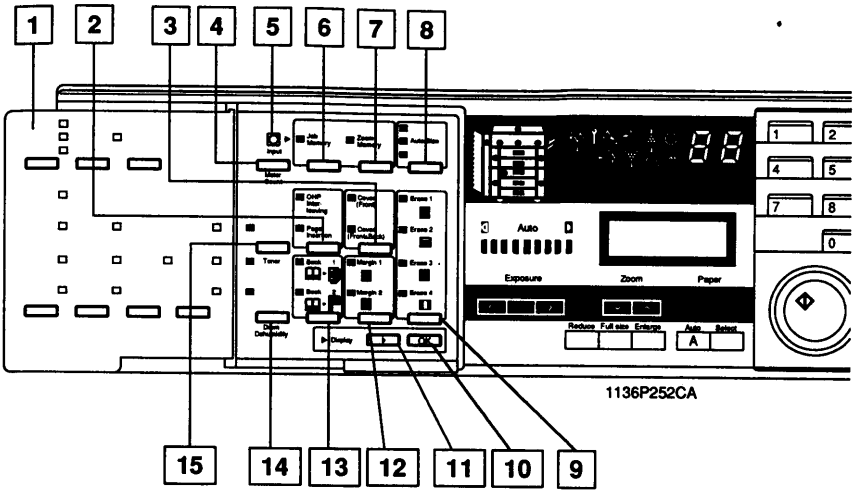

1	System Panel (Door to Supplementary Panel)	Flip to the left to reveal the Supplementary Panel controls.
2	Insertion Mode Key	Sets the copier into the Insertion mode.
3	Cover Mode Key	Sets the copier into the Cover mode.
4	Meter Count Key	Shows on the Message Display the current counts of different electronic counters of the copier.
5	Memory Input Key	Stores a copying job program or a zoom ratio in the memory.
6	Job Memory Select Key	Recalls a copying job program previously stored in the job memory.
7	Zoom Memory Select Key	Stores a zoom ratio in, or recalls one from, the zoom memory.
8	Auto Size Mode Key	Selects the Auto Size Mode.
9	Erase Mode Key	Sets the copier into the Erase mode.
10	Enter Key	Validates the selection made by the Select Key.
11	Select Key	Selects a function from among the options shown on the Message Display.
12	File Margin Mode Key	Sets the copier into the File Margin mode.
13	Book Mode Key	Sets the copier into the Book Copy mode.
14	Drum Dehumidify Key	Removes condensation formed on the surface of the PC Drum.
15	Auxiliary Toner Replenishing Key	Sets the copier into the Auxiliary Toner Replenishing mode. It does not, however, start the toner replenishing sequence if the toner-to-carrier ratio is above a predetermined level.