
8-4. Display Panel

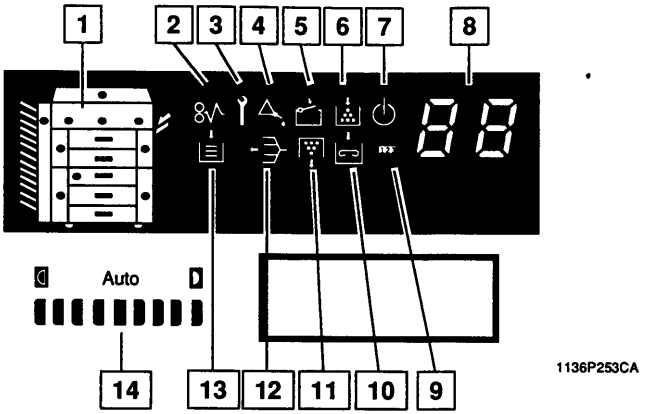

1	Monitor Display	* Shows the paper source which is currently selected for use. * Shows the location of a closure failure. * Shows the location of a paper misfeed.
2	Misfeed Indicator	Indicates that a paper misfeed has occurred
3	Call-Tech.-Rep. Indicator	Indicates that the copier has developed a malfunction.
4	Maintenance Call Indicator	Indicates that a PM counter or Copy Kit counter has reached a preset value.
5	Closure Failure Indicator	Indicates that a Door is left open.
6	Add Toner Indicator	Indicates that the Toner Bottle is running out of toner.
7	Wait Indicator	Indicates that the Fusing Unit is warming up or the Lens/Mirror is in motion.
8	Multi-Copy Display	Shows the number of copies set to be made.
9	Plug-In Counter Indicator	Indicates that the Plug-In Counter is unplugged from the copier or a magnetic card removed from the Data Controller.
10	Add Staple Indicator	Indicates that the Staple Cartridge is running out of staples.
11	Toner Collecting Box Full Indicator	Indicates that the Spent Toner counter has reached a preset value.
12	Remove Copies Indicator	Indicates that there is a copy or copies left in any of the Sorter Bins.
13	Add Paper Indicator	Indicates that the currently selected Drawer has run out of paper.
14	Exposure Information Display	Auto Exposure Indicator : Indicates that the copier is now in the Auto Exposure mode. Exposure Level Indicator : Shows the exposure setting level in the Manual Exposure mode.