
8-5. User's Choice Card

8-5-1. Entering the User's Choice

1. Flip the System Panel to the left and place the User's Choice Card shown below on the Supplementary Panel.
2. Hold down the Panel Reset Key more than 3 seconds.
3. This sets the copier into the User's Choice. Now, operate the panel as instructed by the Message Display.

* For details on the User's Choice functions and associated operating instructions, see the Operator's Manual or SWITCHES ON PWBs.

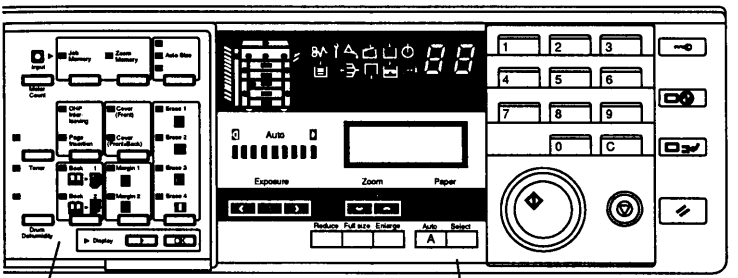

8-5-2. User's Choice Functions

No.	Functions	No.	Functions
1	Language Select	11	Intelligent Sort
2	Mixed Orig. Detection	12	Energy Saver
3	Original Thickness	13	Auto Panel Reset
4	Copy Mode Priority	14	Drum Dehumidify
5	Paper Priority	15	Special Paper
6	Exposure Priority	16	Custom 2-in-1
7	Finishing Priority	17	Custom Book
8	Auto Expo. Level	18	Custom 2-in-1 Separation
9	Manual Expo. Adjust	19	Administrator
10	Counter Removal		