
2-4. Tech. Rep. Settings Switches Board

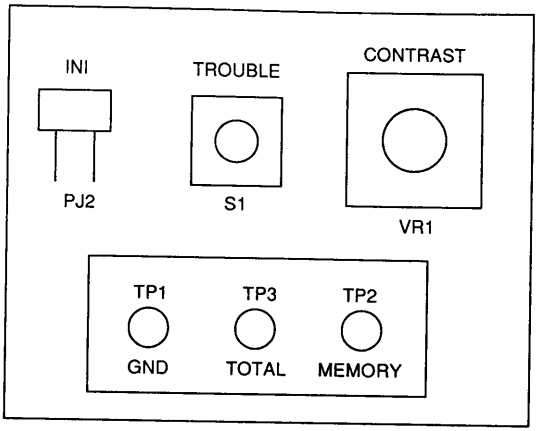

Symbol	Name	Function	Reset/Clear Method	Application
PJ2 (INI)	Initialize Points	Used to clear data other than the Program Memory, Electronic Counter, Tech. Rep./User choice and zoom ratio data.	While connecting the two pins of PJ2, turn the Power Switch ON.	Used when a malfunction cannot be corrected by turning the Power Switch ON/OFF.
S1 (TROUBLE)	Trouble Reset Switch	Used to reset trouble related to Exposure Lamp malfunction (C04xx) and Fusing malfunction (C05xx).	Press the Trouble Reset Switch after correcting the area in trouble.	To reset other trouble or misfeeds, open and close the Front Door.
VR1 (CONTRAST)	Contrast Adjusting Variable Resistor	Used to adjust the contrast of the Message Display.	———	———
TP2 (MEMORY)	Memory Clear Test Point	Used to clear all data except the Electronic Counter and Level History (ATDC level).	While connecting the Memory Clear Pin (TP2) and GND Pin (TP1), turn the Power Switch ON.	Used when incorrect operation cannot be corrected by initializing.
TP1 (GND)	GND Test Point	Ground used for memory clear and total clear.	———	———