- Set the Tech. Rep. Mode by the following procedures:

(1) In the ordinary mode, place the copier in the Tech. Rep. Card Number Entry State.

1) Open the System Panel.
2) Press the Stop Key.
3) Press Multi-Copy Key "0".
4) Press the Stop Key.
5) Press Multi-Copy Key "1".
6) The following screen appears on the Message Display.

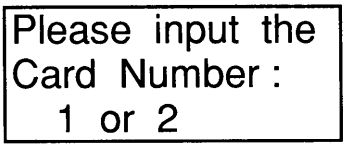

1136S143CA

Tech. Rep. Card No. Entry State

(2) Select the desired mode from the items on the Tech. Rep. Card to set the corresponding Tech. Rep. Mode.

1) Place the Tech. Rep. Card (1 or 2) on the Supplementary Panel.
2) Enter the Tech. Rep. Card Number (1 or 2) with the corresponding Multi-Copy Key.
3) The following screen appears on the Message Display.

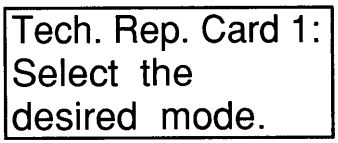

1136S144CA

4) By selecting the desired mode from the items on the Tech. Rep. Card, the corresponding Tech. Rep. Mode is set.

Note: When it is desired to change the Tech. Rep. Card Number after entering the number, press "CARD-1 → CARD-2" or "CARD-2 → CARD-1" on the Tech. Rep. Card to return to the Tech. Rep. Card Number Entry State.

(3) Resetting procedure

- Press the Panel Reset Key.
- Remove the Tech. Rep. Card and Close the System Panel.