
3-2. Function Mode

- This mode is used to check and adjust the operation of the machine.


Setting procedure

1) Place the copier in the Tech. Rep. Card Number Entry State.

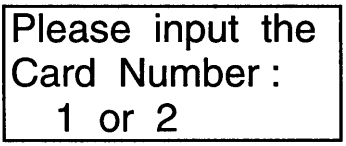


1136S143CA

2) Press Multi-Copy Key "1" to select Tech. Rep. Card-1.

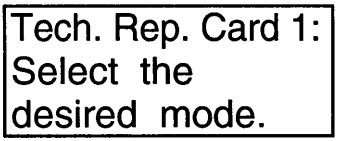

1136S144CA

3) Place the Tech. Rep. Card on the Supplementary Panel with Card-1 face up.
4) Select "Function".
5) The following screen appears on the Message Display.

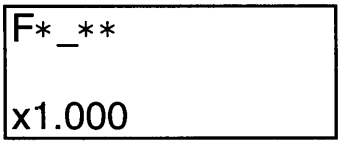

1136S146CA

6) Enter the Function Mode No. with the corresponding Multi-Copy Key.
7) Press the Start Key to start the function operation.
8) Press the Stop Key to terminate the function operation.