
3-3. Tech. Rep. Choice Mode

- This mode is used by the Tech. Rep. to make various settings and adjustments, including copy charge counter settings, according to the needs of the user.


Setting procedure

1) Place the copier in the Tech. Rep. Card Number Entry State.

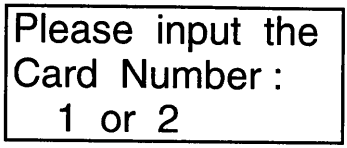


1136S143CA

2) Press Multi-Copy Key "1" to select Tech. Rep. Card-1.

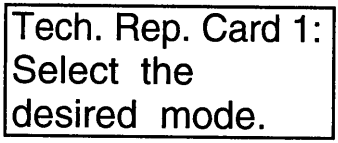

1136S144CA

3) Place the Tech. Rep. Card on the Supplementary Panel with Card-1 face up.
4) Select "Tech. Rep. Choice".
5) The following screen appears on the Message Display.

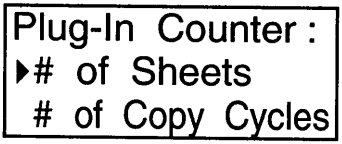

1136S159CA

6) By pressing the OK Key, select the Choice Mode in which you want to change or confirm the setting.
7) To change the setting, press the Cursor Key, which moves the cursor on the screen.
8) To enter the setting, press the Panel Reset Key or OK Key.