• SCH-24

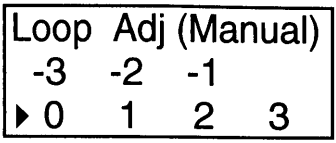

1136S167CA

Note: 1. "–" indicates that the loop length is decreased.
2. The loop length is increased or decreased by 2 mm.

• SCH-70

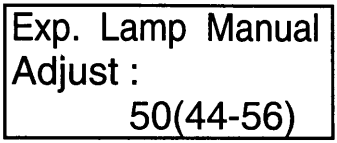

1136S168CA

To change the code on the screen: 1. Press the Clear Key.
2. Enter the code number with the Multi-Copy Keys.

Code	Variable Voltage Value
44	–6V
45	–5V
46	–4V
47	–3V
48	–2V
49	–1V
50	Standard value
51	+1V
52	+2V
53	+3V
54	+4V
55	+5V
56	+6V

Note: After making the above Exposure Lamp fine-adjustment, the "F5" mode must be executed.