
3-6. Counter Mode

- This mode is used by the Tech. Rep. to show or set the counts of various counters.


Procedure

1) Place the copier in the Tech. Rep. Card Number Entry State.

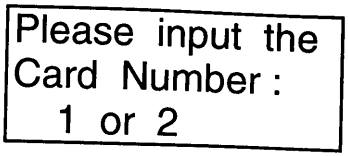

1136S143CA

2) Press Multi-Copy Key "1" to select Tech. Rep. Card-1.

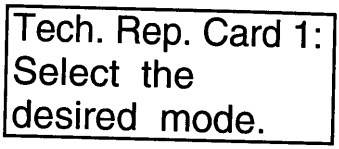

1136S144CA

3) Place the Tech. Rep. Card on the Supplementary Panel with Card-1 face up.
4) Select the desired counter from the following list:

Types of Counters

Items on Card	Counter Name	Description
Paper	Paper Counter	Counts the number of sheets used on a paper size/type basis.
Jam	Jam Counter	Counts the number of jams per section.
Retry	Feed Retry Counter	Counts the number of feed retries per port.
Trouble	Trouble Counter	Counts the number of malfunctions per trouble code.
Maintenance	Maintenance Counter	Used to show and set maintenance timing based on copy cycle.
Port	Port Counter	Counts the number of feed/passage/use times per port.
Consumables	Consumables Counter	Used to show and set the life of consumables based on copy cycle.
Auto CPU Reset	Auto CPU Reset Counter	Used to identify the presence/absence of automatic CPU reset for specific elements.