
Screen Display/Type/Setting Method for Each Counter

- Press the OK Key to switch from one screen to another.
- To move the cursor on the screen, use the Cursor Key.
- To clear the count, use the Clear Key.
- To return the counter to the count it had before clearing, use the Interrupt Key.
- To input the counter setting, use the Multi-Copy Keys after pressing the Clear Key (for the Maintenance, Port and Consumables Counters only).
- To enter the counter setting, use the OK Key or Panel Reset Key.

A. Paper Counter

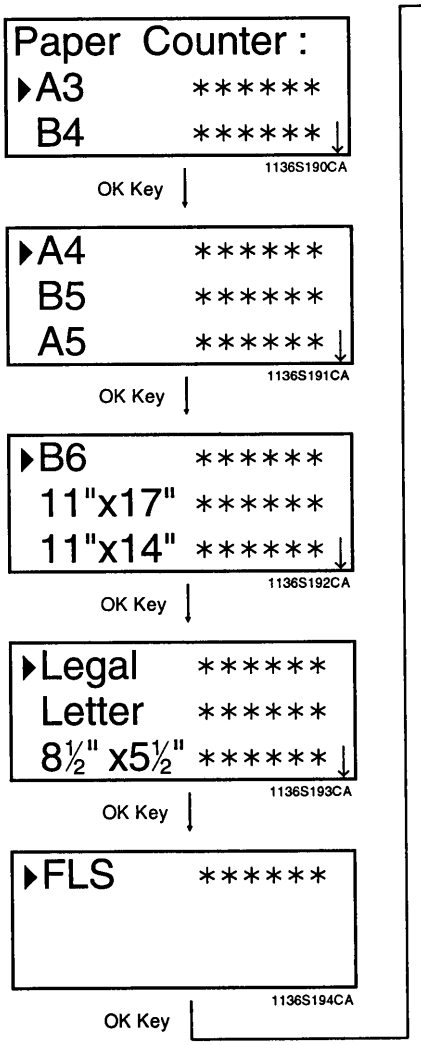

Screen Display	Description
S0	Standard paper
S1	Recycled paper
S2	Special paper (insertion)
S3	Reused paper (2-sided disabled paper)

* For such a paper size as A4 which can be loaded both lengthwise and crosswise, its count represents the sum of both.