E. Maintenance Counter

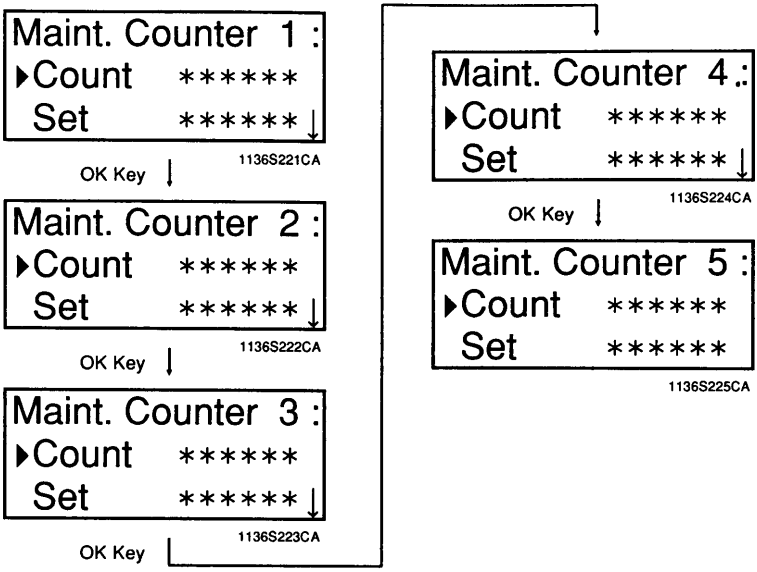

Screen Display	Description
Count	1 count per 1 copy
Setting	Set the maintenance time based on copy cycle count. (Max. 6 digits)

* The above Maintenance Counters 1 to 5 can be used as desired.

* When the count exceeds the settings, the following screen is shown on the Message Display to indicate that an inspection time has come. (When Maintenance Call "YES" has been selected in the Maintenance Call Mode of the Tech. Rep. Choice Mode)

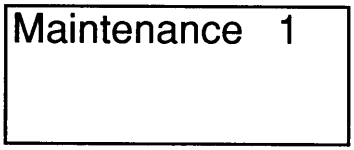

Maintenance call display resetting method

To reset the maintenance call display, clear the count after inspection (cleaning or replacement).