3-9. Security Mode

- This mode is used to register the administrator number (identification number) required in the Security Mode of the User's Choice Mode.

Registration procedure

1) Place the copier in the Tech. Rep. Card Number Entry State.

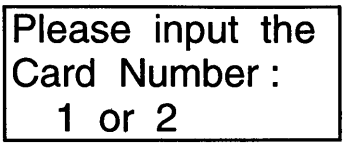

1136S143CA

2) Press Multi-Copy Key "1" to select Tech. Rep. Card-1.

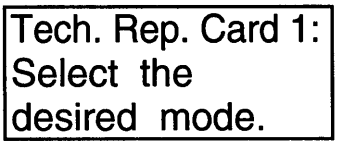

1136S144CA

3) Place the Tech. Rep. Card on the Supplementary Panel with Card-1 face up.
4) Select "Security Mode".
5) The following screen appears on the Message Display.



1136S261CA

6) Press the Clear Key and input a 4-digit administrator number (0000 to 9999) using the Multi-Copy Keys.
7) Press the OK Key to enter the administrator number.
8) The following screen appears on the Message Display.



1136S118CA

Note: After entering the administrator number, the screen changes depending on the mode selected. For more information, see the Administrator Mode in the User's Choice Mode.