

Memory

1) Select "Memory".
2) The following screen appears on the Message Display:

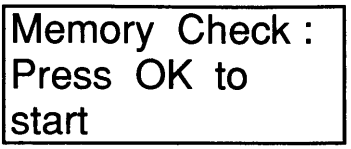

1136S257CA

3) By pressing the OK Key, the following screen appears on the Message Display:

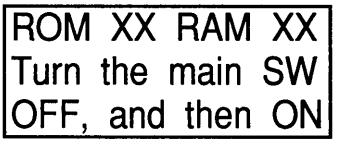

1136S258CA

4) "OK" or "NG" is shown in the area marked ** on the Message Display.
5) "OK" indicates that the Power Switch should be turned OFF, then ON.
6) "ROM NG" indicates that the ROM on the PWB-B should be changed.
7) "RAM NG" indicates that the PWB-B should be changed.