5 USER'S CHOICE MODE

- The User's Choice Mode is used to program the copier (make priority and other settings) according to the user's particular needs.
- Use the User's Choice Card to set the User's Choice Mode.

User's Choice Card

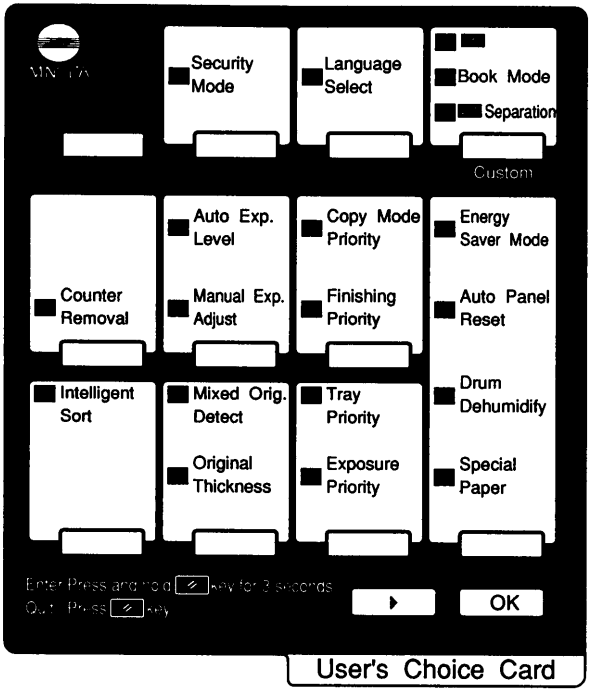

1136S267CA

Setting procedure

1) Open the System Panel.
2) Place the User's Choice Card onto the Supplementary Panel.
3) Hold down the Panel Reset Key for about 3 seconds.
4) The following screen appears on the Message Display:

User's Choice :
Select a mode to
Change settings.

1136S103CA

5) By selecting the mode you want to set from among the items on the User's Choice Card, the corresponding User's Choice Mode is accessed.
6) To change the setting, press the Cursor Key, which moves the cursor on the screen.
7) To enter the setting, press the OK Key or Panel Reset Key.

Resetting method

- Press the Panel Reset Key.
- Remove the User's Choice Card and close the System Panel.