Settings in User's Choice Modes

- The following screen is displayed in each Mode. Note that the Cursor on the screen indicates the initial setting.


Language Select

USA, Canada Area



1136S116EA

Europe Area

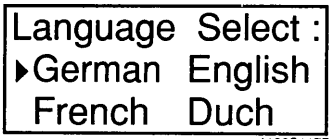

1136S117DA

Mixed Orig. Detect




1136S106CA

Orig. Thickness




1136S131CA

Copy Mode Priority

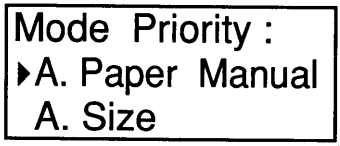

1136S107CA

Paper Priority

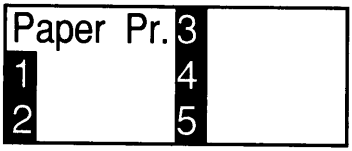


1136S105CA

Europe Area



1136S001AA

USA, Canada Area

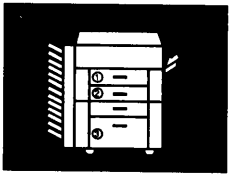

1136S002AA

* The Drawer number flashes to indicate that the corresponding Drawer has been selected for the Paper Priority Mode.
* Initial setting: 1