
Exposure Priority

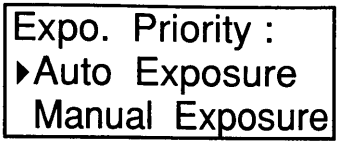


1136S112CA

* When automatic exposure is selected, the manual copy exposure level can be set. (Initial setting: EXP 5 (center))

1) Using the Cursor Key, select "AUTO".
2) Using either of the Exposure Control Keys, select the exposure level.
3) Enter that level with the OK Key.

Finishing Priority

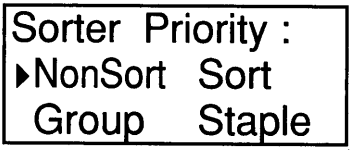

1136S114CA


Auto Expo. Level



1136S111CA

Screen Display	Description
Darker	Equivalent to EXP 7
Normal	Equivalent to EXP 6
Lighter	Equivalent to EXP 5

Manual Expo. Adjust

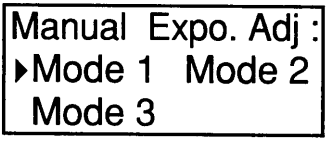

1136S113CA

Screen Display	Lamp Voltage (V) Corresponding to EXP									Description (Original Types)
	1	2	3	4	5	6	7	8	9	
Mode 1	+12	+8	+5	+2	0	−2	−4	−6	−9	Originals with halftone images such as photos
Mode 2	+12	+9	+6	+3	0	−3	−5	−7	−9	Various types of originals
Mode 3	+12	+10	+7	+4	0	−4	−7	−8	−9	Originals with a colored background or faint text