
Special Paper

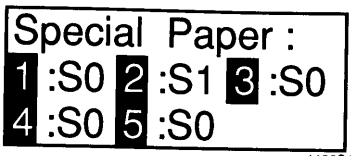


1136S129CA

Setting procedure


1) Using the OK Key, select the Drawer. (The corresponding number flashes.)
2) Using the Cursor Key, select the paper type in accordance with the following table:

Europe Area

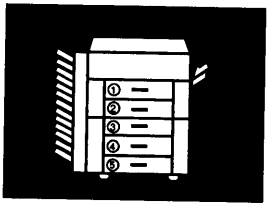

1136S001AA

USA, Canada Area

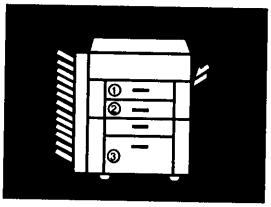


1136S002AA

Screen Display	Description	APS Function (Selection sequence)	Automatic Drawer Switching (Only paper of the same type)
S0	Standard paper (no special paper setting)	O (2)	O
S1	Recycled paper	x	O
S2	Special paper	x	x
S3	Reused paper (2-sided copying disabled)	O (1)	O

- After making the special paper setting, press the Paper Select Key to call the following screen to the Message Display:

Example: When S1 has been set for the 2nd Drawer, S2 for the 3rd Drawer, and S3 for the 4th Drawer

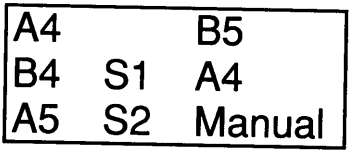

1136S128CA

Note: When "S3" has been set for a given Drawer:

- If 2-sided copying has been set, the "S3" Drawer cannot be selected.
- If the "S3" Drawer has been set, 2-sided copying cannot be selected.