

Custom

Inch Area

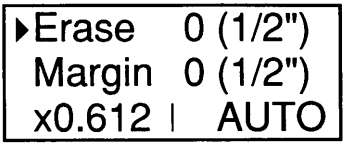

1136S132EA

Metric Area

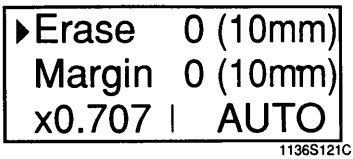

1136S121CA

Setting method

Erase, Margin

1. Use the Cursor Key to select the desired item.
2. Press the Clear Key to clear the current value.
3. Press the Multi-Copy Keys to input a new value in accordance with the following table.
4. Press the OK Key to enter that value.


Note: Only 1/2" or 10 mm is available for Erase and Margin.

Zoom ratio

Use the Reduction, Full Size or Enlargement Keys to select.

Paper

Use the Paper Select Key or Auto Paper Mode Key to select.

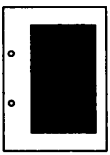Screen Display	0	1	2	3	4
Erase	NO	 1136S011AA	 1136S012AA	 1136S013AA	 1136S014AA
Margin	NO	 1136S015AA	 1136S016AA		