4) Press the Multi-Copy Key "0" to change the data from "1" to "0." Then, SL2 is energized for approx. 5 seconds.

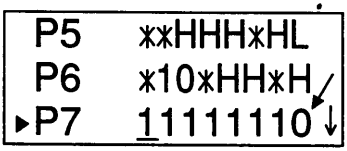

1136T036AA

SL2 is operational if it makes its operating sound. SL2 is faulty if no operating sound is heard.

Note: As soon as the data is changed, the underline moves to the leftmost port whose data can be changed.

5) If SL2 did not operate, run the function "Control Board" of "I/O Check."

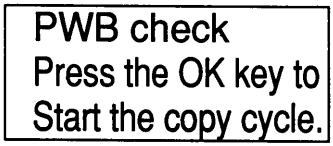

1136T037CA

6) The following message appears if no signals are output from PWB-A to SL2.



1136T038CA

Note: See p. T-63 for malfunction codes for the output signals.