2 PAPER TRANSPORT FAILURE

1. Paper Misfeed

When a paper misfeed occurs in the copier, the corresponding Misfeed Location LED on the Monitor Display blinks to let the user know where the misfeed has occurred. If an LED lights up steadily, it indicates that there might be a sheet of paper present at that particular location in the copier.

Except USA, Canada Area

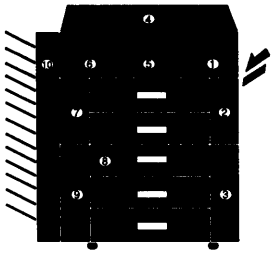

1136T006DA

USA, Canada Area

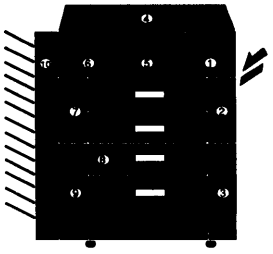

1136T007EA

Misfeed Location LEDs on Monitor Display

Blinking Light	There is a misfeed at that location.
Steady Light	There might be a sheet of paper stopped at that location.

Misfeed Locations Indicated by Misfeed Location LEDs

*: When an option is installed

Steady/ Blinking LED	Misfeed Location	Ref. Page	
①	Multi bypass take-up and transport	T-24 to 27	
②	Copier take-up and vertical transport	T-13 to 18	
③	Paper Feed Cabinet take-up, vertical transport, Duplex Unit	T-30 to 36, T-45 to 48	*
④	Automatic/Duplexing Document Feeder	———	*
⑤	Transport/Separator	T-19 to 23	
⑥	Fusing/Exit	T-28 to 29	
⑦,⑨	Duplex Unit vertical transport	T-37 to 44	*
⑧	Duplex Unit storage	T-43	*
⑩	Sorter/Staple Sorter	———	*