3 MALFUNCTIONS

The copier CPU is capable of self-diagnosis of the copier conditions and, when detecting a malfunction, it shows the corresponding malfunction code on the Message Display. Each malfunction code indicates the particular part which has developed a malfunction and the type of malfunction.

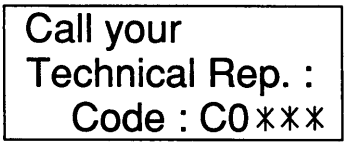

1136T100CB

Represents the malfunction detail.

Indicates the particular malfunctioning part in the section.

Indicates the malfunctioning section.

Malfunction Resetting Procedure
After the source of the malfunction has been eliminated:

- Press the Trouble Reset Switch on Tech. Rep. Settings Switches Board PWB-I for an Exposure Lamp failure (C04**) and fusing failure (C05**).
- Swing open and close the Front Door for any other malfunctions.
- Disconnect and connect the option or open and close the option door for malfunctions of options.

1. Detection Timing

	Code	Description	Detection Timing
Drive	C0000	Main Drive Motor M1's failure to turn	The Main Drive Motor Lock signal remains HIGH for a continuous 1.5-second period 1 second after M1 has been energized.  1136T45TCA
	C0010	Main Drive Motor M1 turning at abnormal timing	The Main Drive Motor Lock signal remains LOW for a continuous 1.5-second period 1 second after M1 has been deenergized.  1136T46TCA