

11. Remove the Upper Synchronizing Roller.

(7) Cleaning of the Upper and Lower Synchronizing Rollers

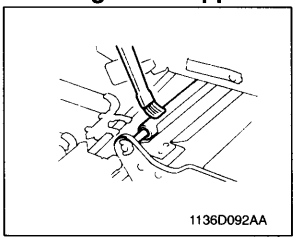

1. Swing down the Front Door and slide out the IU.
2. Using a brush or a soft cloth dampened with alcohol, clean the Upper Synchronizing Roller.

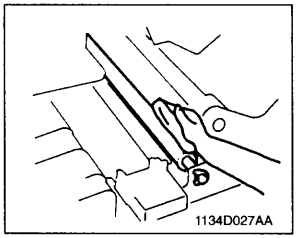

3. Swing down the Transport Section Release Lever.
4. Using a brush or a soft cloth dampened with alcohol, clean the Lower Synchronizing Roller.

(8) Replacement of the Paper Dust Remover

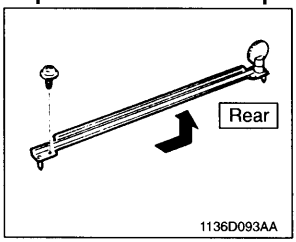

1. Swing down the Front Door and slide out the IU.
2. Loosen the screw that secures the Paper Dust Remover Assy at the rear of the copier.
3. Remove the screw that secures the Paper Dust Remover Assy at the front of the copier.
4. Remove and replace the Paper Dust Remover Assy.

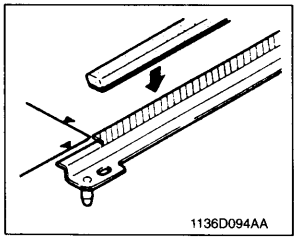

5. When only the Paper Dust Remover is to be replaced, affix the new one along the reference line as shown on the left.