

(4) Removal of the Scanner

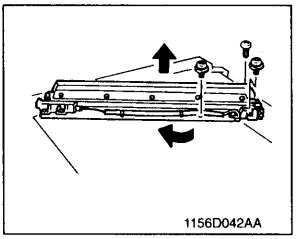


1. Move the Scanner to the right side of the copier. Remove three screws to free the Scanner.

> ***NOTE***
>
> *Hold the Scanner at a point near the Scanner Shaft when moving it.*
> *To remove the Scanner, turn it counterclockwise.*

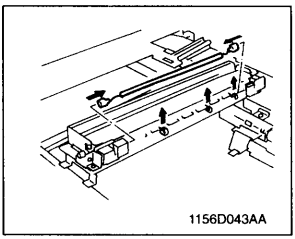


2. Unplug the Thermal Fuse terminal connector and remove the Thermal Fuse wire from three clamps.
3. Unplug the Exposure Lamp terminal connector.

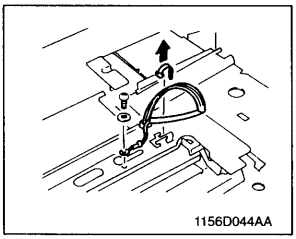


4. Turn over the Scanner and remove one screw, one washer, and the ground wire.
5. Remove the tie band and harness.
6. Remove the Scanner from the copier.

(5) Cleaning of the Exposure Lamp

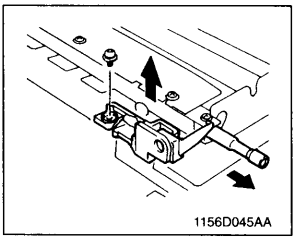

1. Remove one screw and the Exposure Lamp terminal.
2. Slide out the Exposure Lamp.

> ***NOTE***
>
> *When the Exposure Lamp has been cleaned or replaced, be sure to make the "adjustment of exposure level in the Auto Exposure mode." (See p. D-72.)*

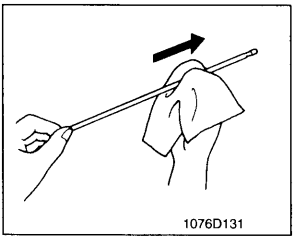

3. Using a soft cloth dampened with alcohol, clean the lamp by gently wiping its surface in one direction.

> ***NOTE***
>
> *When reinstalling the lamp, point the protruding navel of the lamp toward the opening in the Lamp Reflector so that the protruding navel will not hit against the Lamp Reflector.*