

(6) Removal of the Thermal Fuse

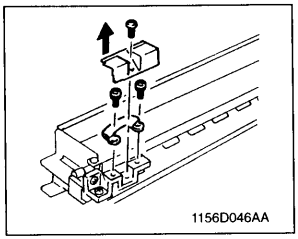


1. Unplug the Thermal Fuse connector.
2. Remove the Thermal Fuse cord from three clamps.
3. Remove one screw and Thermal Fuse cover.
4. Remove two screws and the Thermal Fuse.


(7) Cleaning of the 1st, 2nd, and 3rd Mirrors

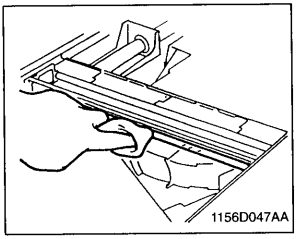

1. Wipe clean the 1st Mirror with a soft cloth.

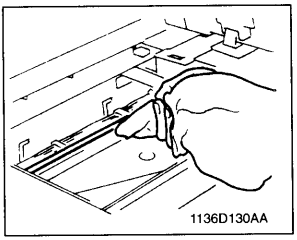

2. Wipe clean the 2nd Mirror with a soft cloth.

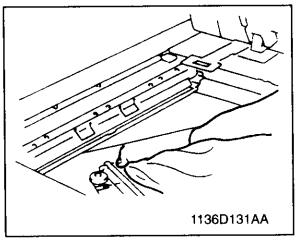

3. Wipe clean the 3rd Mirror with a soft cloth.